




coyotetrips.com

## How to loop the strap

Loop the strap through the slot in the holder. Go in front of the part, and through the slot on the other side of the holder. Then bring the end of the strap through the clamp and tighten the strap, which pushes the part into the holder and secures it. Then put the end of the strap through the ring to reduce flapping around.

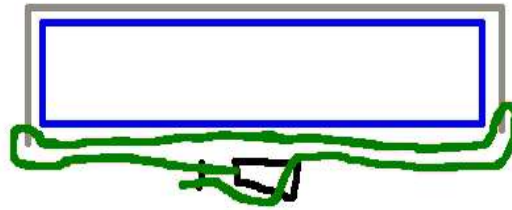

Do NOT go behind the part with the strap, as this won't properly secure the part.

